



Racorería Rosca SAE JIC



TUERCA

Rosca

7/16
1/2
9/16
3/4
7/8
1" 1/16
1" 5/16



CONO DE CIERRE

Medida

Tubo

7/16	6 mm
1/2	8 mm
9/16	10 mm
3/4	12 mm
7/8	16 mm
1" 1/16	20 mm
1" 5/16	25 mm



EMPALME MACHO

Rosca

Rosca

1	2
7/16	7/16
1/2	1/2
9/16	9/16
3/4	3/4
7/8	7/8
1" 1/16	1" 1/16
1" 5/16	1" 5/16
1" 5/8	1" 5/8
1" 7/8	1" 7/8

SAE (JIC)



**EMPALME
MACHO**

SAE (JIC)-UNF

Rosca SAE (JIC)	Rosca UNF
7/16	7/16
7/16	1/2
7/16	9/16
1/2	1/2
9/16	9/16
9/16	3/4
3/4	3/4
3/4	7/8
3/4	1" 1/16
7/8	3/4
7/8	7/8
7/8	1" 1/16
1" 1/16	3/4
1" 1/16	7/8
1" 1/16	1" 1/16
1" 1/16	1" 5/16
1" 5/16	1" 1/16
1" 5/16	1" 5/16



**EMPALME
MACHO**

SAE (JIC)-UNF

Rosca SAE	Rosca GAS
7/16	1/8
7/16	1/4
7/16	3/8
7/16	1/2
1/2	1/4
9/16	1/4
9/16	3/8
9/16	1/2
3/4	1/4
3/4	3/8
3/4	1/2
3/4	1/4
7/8	3/8
7/8	1/2
7/8	3/4
1" 1/16	3/8
1" 1/16	1/2
1" 1/16	3/4
1" 1/16	1"
1" 5/16	3/4
1" 5/16	1"
1" 5/8	1"
1" 5/8	1" 1/4
1" 7/8	1" 1/2



**EMPALME
MACHO**

SAE (JIC)-GAS (NPT)

Rosca SAE	Rosca GAS
7/16	1/8
7/16	1/4
7/16	3/8
9/16	1/4
9/16	3/8
3/4	3/8
3/4	1/2
7/8	3/8
1" 5/16	3/4



**ADAPTADOR
MACHO-HEMBRA**

SAE (JIC)

Rosca Macho	Rosca Hembra
7/16	1/2
7/16	9/16
1/2	9/16
7/16	3/4
1/2	3/4
9/16	3/4
3/4	7/8
9/16	1" 1/16
3/4	1" 1/16
7/8	1" 1/16
1" 1/16	1" 5/16
1" 5/16	1" 5/8



**ADAPTADOR
MACHO-HEMBRA**

SAE (JIC)-GAS (BSP)

Rosca Macho SAE	Rosca Hembra GAS
7/16	1/8
7/16	1/4
1/2	1/4
9/16	3/8
3/4	3/8
3/4	1/2
7/8	1/2
1" 1/16	3/4
1" 5/16	1"
1" 5/8	1" 1/4
1" 7/8	1" 1/2



**TUERCA
CIEGA**

Rosca

- 7/16
- 1/2
- 9/16
- 3/4
- 7/8
- 1" 1/16
- 1" 5/16



**TAPÓN
MACHO**

Rosca

- 7/16
- 1/2
- 9/16
- 3/4
- 7/8
- 1" 1/16
- 1" 5/16



**ADAPTADOR
MACHO FIJO
TUERCA LOCA**

SAE (JIC)-GAS (BSP)

Rosca	Rosca
Hembra	Macho
SAE	GAS
7/16	1/4
1/2	1/4
9/16	1/4
9/16	3/8
3/4	3/8
3/4	1/2
7/8	1/2
1" 1/16	3/4
1" 5/16	3/4
1" 5/16	1"



PASATABIQUES

Rosca

7/16
1/2
9/16
3/4
7/8
1" 1/16
1" 5/16



ADAPTADOR TUERCA LOCA

Rosca	Rosca
Rosca 1	Rosca 2

7/16	7/16
1/2	1/2
9/16	9/16
3/4	3/4
7/8	7/8
1" 1/16	1" 1/16
1" 5/16	1" 5/16



CODO 90°

MACHO FIJO

Rosca	Rosca
Rosca 1	Rosca 2

7/16	7/16
1/2	1/2
9/16	9/16
3/4	3/4
7/8	7/8
1" 1/16	1" 1/16
1" 5/16	1" 5/16
1" 5/8	1" 5/8



CODO 90°

MACHO ORIENTABLE

SAE (JIC)

Rosca Rosca 1	Rosca Rosca 2
7/16	7/16
1/2	1/2
9/16	9/16
3/4	3/4
7/8	7/8
1" 1/16	1" 1/16
1" 5/16	1" 1/16
1" 5/16	1" 5/16



CODO 90°

MACHO ORIENTABLE

SAE (JIC)-GAS (BSP)

Rosca SAE	Rosca GAS
7/16	1/8
7/16	1/4
1/2	1/4
9/16	1/4
9/16	3/8
3/4	1/4
3/4	3/8
3/4	1/2
7/8	3/8
7/8	1/2
7/8	3/4
1" 1/16	1/2
1" 1/16	3/4
1" 5/16	3/4
1" 5/16	1"
1" 5/16	1" 1/4
1" 5/8	1"
1" 5/8	1" 1/4



CODO 90°

MACHO ORIENTABLE

SAE (JIC)-MÉTRICO

Rosca SAE	Rosca Métrica
7/16	10x100
1/2	12x150
9/16	14x150
3/4	16x150
3/4	18x150
7/8	18x150
7/8	22x150



CODO 90°

MACHO FIJO

TUERCA LOCA

Rosca Macho	Rosca Hembra
7/16	7/16
1/2	1/2
9/16	9/16
3/4	3/4
7/8	7/8
1" 1/16	1" 1/16
1" 5/16	1" 5/16
1" 5/8	1" 5/8



CODO 90°

MACHO FIJO

SAE (JIC)-GAS (NPT)

Rosca SAE	Rosca GAS
7/16	7/16
7/16	1/4
1/2	1/4
9/16	1/4
3/4	3/8
3/4	1/2
7/8	1/2



CODO 45°

MACHO FIJO
TUERCA LOCA

	Rosca Macho	Rosca Hembra
	7/16	7/16
	1/2	1/2
	9/16	9/16
	3/4	3/4
	7/8	7/8
	1" 1/16	1" 1/16
	1" 5/16	1" 5/16



TE

MACHO FIJO

	Rosca 1	Rosca 2	Rosca 3
	7/16	7/16	7/16
	1/2	1/2	1/2
	9/16	9/16	9/16
	3/4	3/4	3/4
	7/8	7/8	7/8
	1" 1/16	1" 1/16	1" 1/16
	1" 5/16	1" 5/16	1" 5/16



TE

MACHO FIJO

LATERAL
ORIENTABLE

	Rosca 1	Rosca 2	Rosca 3
	7/16	7/16	7/16
	1/2	1/2	1/2
	9/16	9/16	9/16
	3/4	3/4	3/4
	7/8	7/8	7/8
	1" 1/16	1" 1/16	1" 1/16



TE

TUERCA LOCA
CENTRAL

Rosca	Rosca	Rosca
1	2	3
7/16	7/16	7/16
1/2	1/2	1/2
9/16	9/16	9/16
3/4	3/4	3/4
7/8	7/8	7/8
1" 1/16	1" 1/16	1" 1/16
1" 5/16	1" 5/16	1" 5/16



TE

TUERCA LOCA
LATERAL

Rosca	Rosca	Rosca
1	2	3
7/16	7/16	7/16
1/2	1/2	1/2
9/16	9/16	9/16
3/4	3/4	3/4
7/8	7/8	7/8
1" 1/16	1" 1/16	1" 1/16
1" 5/16	1" 5/16	1" 5/16



**CODO
ACCESORIAL
90°**

MACHO FIJO
TUERCA LOCA

Rosca Macho	Rosca Hembra
1/4	1/4
3/8	3/8
1/2	1/2
3/4	3/4
1"	1"
1" 1/4	1" 1/4
1" 1/2	1" 1/2



**CODO
ACCESORIAL
90°**

TUERCA LOCA
TUERCA LOCA

Rosca 1	Rosca 2
1/4	1/4
3/8	3/8
1/2	1/2
3/4	3/4
1"	1"
1" 1/4	1" 1/4
1" 1/2	1" 1/2



**CODO
ACCESORIAL
45°**

MACHO FIJO
TUERCA LOCA

Rosca Macho	Rosca Hembra
1/4	1/4
3/8	3/8
1/2	1/2
3/4	3/4
1"	1"
1" 1/4	1" 1/4
1" 1/2	1" 1/2



**CODO
90°**

MACHO FIJO

Rosca 1	Rosca 2
1/4	1/4
1/4	3/8
3/8	3/8
3/8	1/2
1/2	1/2
1/2	3/4
3/4	3/4
3/4	1"
1"	1"
1" 1/4	1" 1/4



**CODO
90°**

**MACHO
ORIENTABLE**

Rosca 1	Rosca 2
1/4	1/4
3/8	3/8
1/2	1/2
3/4	3/4
1"	1"



**CODO
90°**

**MACHO FIJO
TUERCA LOCA**

Rosca Macho	Rosca Hembra
1/4	1/4
3/8	3/8
1/2	1/2
3/4	3/4
1"	1"
1" 1/4	1" 1/4
1" 1/2	1" 1/2



**CODO
90°**

HEMBRA FIJA

	Rosca 1	Rosca 2
	1/4	1/4
	3/8	3/8
	1/2	1/2
	3/4	3/4
	1"	1"
	1" 1/4	1" 1/4



TE

MACHO FIJO

	Rosca Central	Rosca Lateral 1	Rosca Lateral 2
	1/4	1/4	1/4
	3/8	3/8	1/4
	3/8	3/8	3/8
	1/2	1/2	3/8
	1/2	1/2	1/2
	3/4	3/4	1/2
	3/4	3/4	3/4
	1"	1"	3/4
	1"	1"	1"
	1" 1/4	1" 1/4	1" 1/4



TE

**TUERCA LOCA
CENTRAL**

	Rosca 1	Rosca 2	Rosca 3
	1/4	1/4	1/4
	3/8	3/8	3/8
	1/2	1/2	1/2
	3/4	3/4	3/4
	1"	1"	1"
	1" 1/4	1" 1/4	1" 1/4



TE

	Rosca 1	Rosca 2	Rosca 3
TUERCA LOCA LATERAL	1/4	1/4	1/4
	3/8	3/8	3/8
	1/2	1/2	1/2
	3/4	3/4	3/4
	1"	1"	1"
	1" 1/4	1" 1/4	1" 1/4



TE

	Rosca 1	Rosca 2	Rosca 3
HEMBRA FIJA	1/4	1/4	1/4
	3/8	3/8	3/8
	1/2	1/2	1/2
	3/4	3/4	3/4
	1"	1"	1"
	1" 1/4	1" 1/4	1" 1/4



suhimar
suministros
hidráulicos

Pere III el Cerimoniós, 39
Telf./ Fax. 937 996 159
08303 - Mataró
Barcelona
mataro@suhimar.com